 




Digital Photo Frame

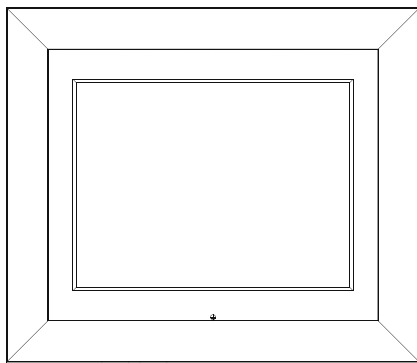

Operating Manual DPF801/DPF1001

Introduction

Thank you for buying this Bush product, which is designed to give you many years of trouble-free service.

You may already be familiar with using a similar unit, but please take time to read these instructions. They are designed to familiarize you with the unit's many features and to ensure you get the very best from your purchase.

Safety is important

Your safety and the safety of others is important.

Please therefore, ensure you read the Safety Instructions before you operate this unit.

Warranty

In the unlikely event that your product fails to work normally, please call the below free phone number to discuss the problem with one of our qualified service engineers.

Australia.

Bush Warranty: 1800 509 394

New Zealand

Bush Warranty: 0800 450 259

Safety Instructions

- Always read the safety instructions carefully.
- Keep this User's Manual for future reference.
- Keep this equipment away from humidity.
- Lay this equipment on a reliable flat surface before setting it up.
- Do not stand it on soft furnishings.
- If any of the following situation arises, get the equipment checked by a service technician:
 - The equipment has been exposed to moisture.
 - The equipment has been dropped and damaged.
 - The equipment has obvious sign of breakage.
 - The equipment has not been working well or you can not get it work according to User's Manual.

Warning

- To prevent the risk of electric shock, do not open the cover or the back of the receiver.
- Do not block the ventilation holes of the device. Leave appropriate gap above and around it to allow for adequate ventilation.
- Do not place the device in an unventilated cabinet or on top of a unit which emits heat.

Copyright Statement

No part of this publication may be reproduced in any form by any means without the prior written permission. Other trademarks or brand names mentioned herein are trademarks or registered trademarks of their respective companies.

Disclaimer

Information in this document is subject to change without notice. The manufacturer does not make any representations or warranties (implied or otherwise) regarding the accuracy and completeness of this document and shall in no event be liable for any loss of profit or any commercial damage, including but not limited to special, incidental, consequential, or other damage.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

WARNING: To reduce the risk of fire or electric shock, do not expose this unit to any liquids or extreme heat.

TABLE OF CONTENTS

TABLE OF CONTENTS	1-2
1.Connection	3
2.Supported Interfaces	3
3.Illustration of button layout on the remote control	4-5
4.System Settings	6-8
4.1 Photo Setting	6
4.1.1 Interval Time	6
4.1.2 Transition Effect	6
4.1.3 Show Type	6
4.1.4 Slide Mode	6
4.1.5 Browse	6
4.1.4 Auto Play	7
4.2 Display Setup	7
4.2.1 Brightness	7
4.2.2 Contrast	7
4.2.3 TFT Brightness	7
4.2.4 TFT Contrast	7
4.2.5 TFT Saturation	8
4.3 Custom Setup	8
4.3.1 OSD Language	8
4.3.2 Encoding	8
4.3.3 Repeat mode	8
4.3.4 USB Source	8
4.3.5 Default	8
4.4 Exit	8
5.Photo	8-9
6.Music	9
7.Photo+Music	9
8.Movie	10
9.Calendar	10-11
9.1 Display	11
9.2 Set Date	11
9.3 Exit	11
10.Clock	11-12
10.1 Display	11
10.2 Set Time	12

TABLE OF CONTENTS

10.3 Exit	12
11.Alarm	13
11.1 Enable	13
11.2 SetTime	13
11.3 Exit	13
12.Auto-Power	13-14
12.1 Power On Enable	13
12.2 Power off Enable	13
12.3 Set Time	14
12.4 Exit	14
13.Edit	14-17
13.1 Select Source	14
13.2Copy	15
13.3 Delete	15
13.4 New Folder	16
13.5 Format PhotoFrame	17
14.Ebook	17
15.Basic Operations	17-23
15.1 STANDBY: Turn on the photo frame or turn it to stand-by mode	17
15.2 Function: main menu	17
15.3 Basic Playback Functions	18
STOP:	18
PLAY/PAUSE:	18
Fast-forward play:	18
Fast rewind:	18
NEXT: Go to the next file.	18
PREV: Go to the previous file.	18
Repeat: Repetitive Playback	18
DISPLAY: Information Display	18
Zoom: Enlarge Images	19
VOL+/-: Volume	19
MUTE:	20
Rotate JPG Images:	20
JPG Browse Mode:	21
Media Manager:	21
Connecting to your PC •	21

1 Connection

Connect the DC plug of the AC-DC power adapter to the DC IN (9V) socket at the back of the photo frame. Connect the power adaptor to a AC 230/240V mains socket.

Caution:

Only connect the mains adapter to a properly installed wall socket with a voltage matching to the "Technical data" of the mains adapter. Using an incorrect adaptor could damage your photo frame or adaptor. The remote's battery is factory installed. Open the battery compartment door and remove the protective battery sheet before use. When the battery becomes weak, replace the battery with a type CR2025 3V Lithium battery. When installing the new battery make sure to install the battery with the "+" side up.



2 Supported Interfaces

- SD/MMC: with dimensions of 24mm x 32mm x 2.1mm (about the size of a postage stamp) as shown in the illustration:



- MS: dimensions for the MS Card are 50mm x 21.5mm x 2.8mm, which is the exclusive memory card format for Sony's digital products, as shown in the illustration:



- USB: supports








- CF:




Note: This unit has been designed where possible to be compatible with most makes of USB device and memory cards. Due to the many varied types available, we cannot guarantee that all makes and models are able to be used.

3 Illustration of button layout on the remote control


3.1 Top side appearances

 - ①  : PLAY/PAUSE button, use this button to start playback, pause or resume playback. This button also use as ENTER in menus and in File manger.
- ②  : PREVIOUS button, use this button to skip to last photo, song or video or scroll up when reading eBook. Press this button to move cursor up in File Manager.
- ③  : NEXT button, use this button to skip to next photo, song or video or scroll down when reading eBook. Press this button to move cursor down in File Manager.
- ④  : LEFT button, use this button to fast backward during playback of song or video or rotate left 90 degrees. Press this button to move cursor to the right in File Manager.
- ⑤  : RIGHT button, use this button to fast forward during playback of song or video or rotate right 90 degrees. Press this button to move cursor to the left in File Manager.
- ⑥ **SETUP**: SETUP button, press once to enter into SETUP mode. Press and hold for 3 seconds to stop during playback of song or video; or to enter thumbnail or file management mode during playback of photo.
- ⑦ **RETURN**: RETURN button, press once to return to last mode. Press and hold for 3 seconds will return to main menu.

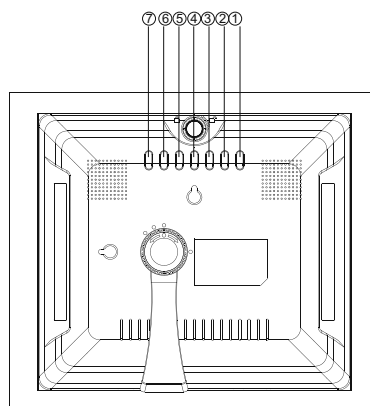

 3.2 Left interface


 

- ① **VOLUME**: Adjusting volume.
- ② **USB**: For connect to USB devices.
- ③ **PC**: For connect to PC.
- ④ **POWER ON-OFF** :Power On/Off switch.
- ⑤ **DC IN 9V** : External DC9V jack.

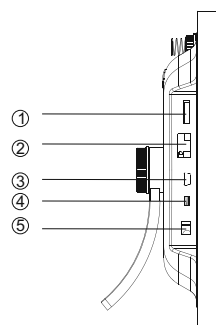


NOTE:

Do not use ② and ③ at the same time.
Please go back to main menu before connecting ③ to PC.

3.3 Right interface

 
- ① **SD/MMC**  **MS**  : SD/MMC/MS card slot.
- ② **CF**: CF card slot.
- ③  : Earphone jack.

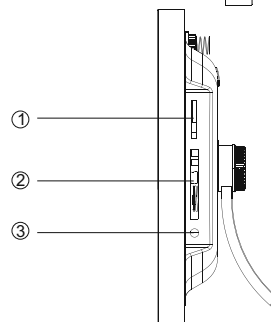

3 Illustration of button layout on the remote control

3.4 Remote controller instruction

 - ① **STANDBY**: Press this button, to enter into STANDBY mode or start up from standby mode.
- ② **FILE**: Press this button, to read ebook.
- ③ **PHOTO+ MUSIC**: Press this button, to play photo+music.
- ④ **PHOTO**: Press this button, to view photo.
- ⑤ **VOL-**: Press this button, to turn down volume.
- ⑥ **VOL+**: Press this button, to turn up volume.
- ⑦ **CALENDAR**: Press this button, to show real time and date.
- ⑧ **◀**: Press this button, move cursor left, or rotate photo left 90 degree.
- ⑨ **HOME**: Press this button, to return to main interface.
- ⑩ **RETURN**: Press this button, to back to last interface. or go to File Manager when viewing photo or during video playback.
- ⑪ **PLAY/PAUSE**: Press this button, to play or pause.
- ⑫ **STOP**: Press this button, to stop playing.
- ⑬ **⏮**: Press this button, to skip backward or previous photo
- ⑭ **⏭**: Press this button, to skip forward or next photo.
- ⑮ **SETUP**: Press this button, to enter SETUP mode.
- ⑯ **PHOTO MODE**: Press this button, to fit to screen or keep original size of photos.
- ⑰ **VIDEO**: Press this button, to play movie. And change audio channel while playing movie.
- ⑱ **MUSIC**: Press this button, to play music.
- ⑲ **ZOOM**: When playing photo, press this button, to zoom in picture.
- ⑳ **▲**: Press this button, move cursor up or flip photo horizontally.
- ㉑ **▶**: Press this button, move cursor right, or rotate photo right 90 degree.
- ㉒ **ENTER**: Press this button, enter current selected object.
- ㉓ **MUTE**: Press this button, to turn off sound.
- ㉔ **▼**: Press this button, move cursor down or flip photo vertically.
- ㉕ **DISPLAY**: Press this button, to display relevant information in different mode.
- ㉖ **REPEAT**: Press this button, to select different repeated mode.
- ㉗ **⏭**: Press this button, to fast forward in playing movie or song.
- ㉘ **⏮**: Press this button, to fast backward in playing Movie or song.

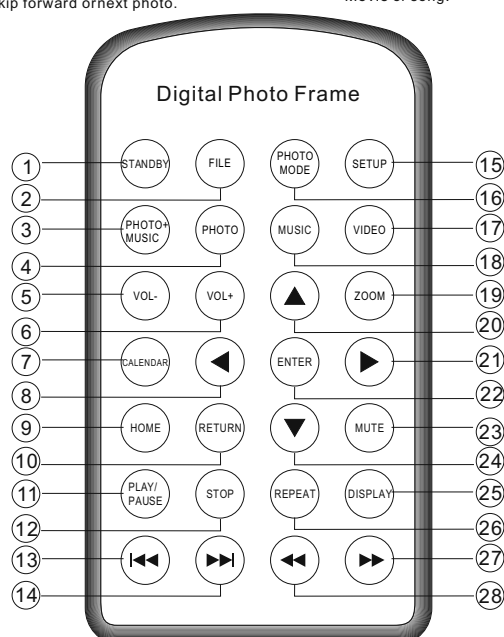


4 System Settings

Topower on thephoto frame, setthe POWER switchto ON position.

The following operationsare using remote control.

 Select[Setup] from the main menu, press the **ENTER** button or press the **SETUP** button in any other mode to enter setup mode. Below illustration shows the screen of the setup menu. Use navigation buttons to select decided item followed by **ENTER** button. Use **▲▼** button to select between options then press **ENTER** to confirm. The following illustration shows the initial screen in the settings mode, and in the following section

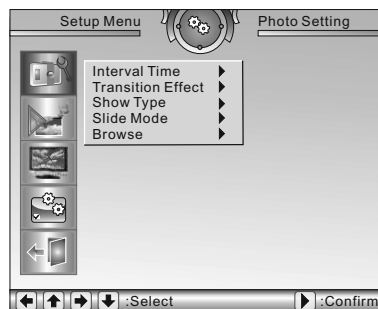

The adjustment operation for the SETUP menu is as follows:

4.1 Photo Setting

4.1.1 Interval Time

This option can be used to set the length of time for display of each image. There are seven options: 5 seconds, 10 seconds, 15 seconds, 30 seconds, one minute, three minutes, or off the function.

4.1.2 Transition Effect

This option is used to set the transition effect as images change.

4.1.3 Show Type

This option is used to set the photo fit to screen or keep its original size.

 
4.1.4 Slide Mode

This option is used to set the slide mode while photos showing. Include 3 options as :Normal, Motion and Date & Time.

4.1.5 Browse


There are two kinds of "Photo" modes, one is the "Thumbnail" mode, and the other is the "File Manager" mode.

Thumbnail mode:

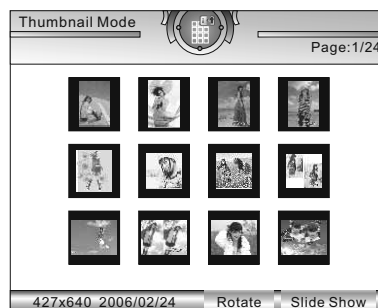

4 System Settings

 File Manager mode:

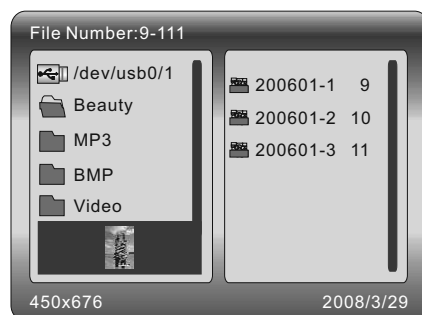

4.1.4 Auto Play

4.1.4.1 Photo

Slide show will be automatically started if auto-play for photo is set to on when Photo is selected in Main menu or **PHOTO** button is pressed.

Either Thumbnail mode or File Manager will be display if auto-play for photo is set to off.

4.1.4.2 Music

Music playback will be automatically started if auto-play for music is set to on when MUSIC is selected in Main menu or **MUSIC** button is pressed.

File Manager will be display if auto-play for music is set to off. Select decided music file using 4 navigation buttons followed by **ENTER** button or **PLAY/PAUSE** button.

4.1.4.3 Movie

Movie playback will be automatically started if auto-play for movie is set to on when Movie is selected in Main menu or **VIDEO** button is pressed.

File Manager will be display if auto-play for movie is set to off. Select decided video file using 4 navigation buttons followed by **ENTER** button or **PLAY/PAUSE** button.

4.2 Display Setup

4.2.1 Brightness

This option allows the user to set the brightness of the television screen. They can choose from three different options: normal, bright, and soft.

4.2.2 Contrast

This option can be used to set the screen contrast. The contrast is divided into 15 different levels, from -4~0~+4, with larger numbers representing greater contrast.

4.2.3 TFT Brightness

This option can be used to set the screen brightness. The brightness is divided into 15 levels, from -7~0~7, with the larger (positive) numbers representing greater brightness.

 
4.2.4 TFT Contrast

This option can be used to set the screen contrast. The contrast is divided into 15 different levels, from -7~0~7, with larger numbers representing greater contrast.

4 System Settings

4.2.5 TFT Saturation

This option can be used to set the saturation of the display. The saturation is divided into 15 levels, from -7~0~7, with larger numbers representing a higher degree of saturation.

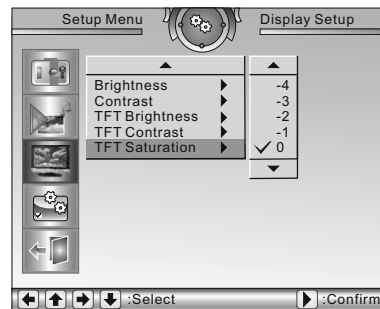

4.3 Custom Setup

4.3.1 OSD Language

This option can be used to set the language for the OSD (on screen display). The user can choose from: English.

4.3.2 Encoding

This option sets the character encoding of the filenames. There are two types of encoding to choose from, Western European and Central European.

4.3.3 Repeat mode

This option allows the user to set the play repeat mode. There are four available options: Off, One, Folder, and All.

Off: turns off the repeat mode.

One: repeats the file that is currently playing.

Folder: repeats the folder that is currently playing.

All: repeatedly plays all of the files inside the storage medium.

4.3.4 USB Source

Select storage device connected to PC

4.3.5 Default

By setting this option, all settings will be reset to the original system settings.

4.4 Exit

Leaves the setup menu, and goes back to the main menu.

5 Photo

 
 
After choosing [Photo] from the main menu, press the **ENTER** key, and the system will automatically playback found image file stored in external storage device (SD/MMC, USB, CF) or internal memory. If no supported file is found, "No Playable File" will appear on the display then return to Main menu.

To playback image from a different storage device, press **HOME** button in any mode then select Photo in Main menu then press **ENTER** button. Use **◀▶** buttons to select decided device followed by **ENTER** button to start playback image.

Note:-

The photo frame can support image files in JPG format.

5 Photo

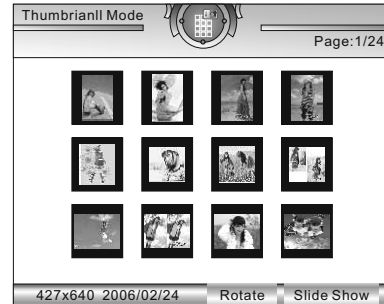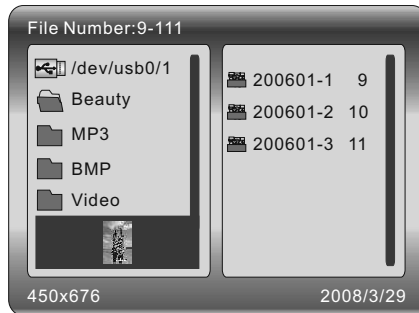


6 Music

After choosing **[Music]** from the main menu, press the **[ENTER]** key, and the system will automatically playback found audio file stored in external storage device (SD/MMC, USB, CF) or internal memory. If no supported file found, "No Playable File" will be appears on the display then return to Main menu. To playback audio in different storage device, press **[HOME]** button in any mode then select Music in Main menu then press **[ENTER]** button, use **[◀▶]** to select decided device followed by **[ENTER]** button to start playback audio file if auto-play is set to on. If File Manager appears, use navigation buttons to select decided file then press **[ENTER]** button to start.

Note:-

 The photo frame can support audio files in MP2, MP3 and WMA format.

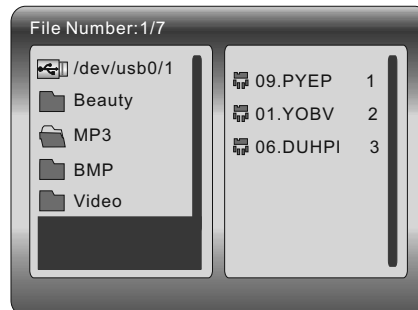

7 Photo+Music

After choosing **[Photo+Music]** from the main menu, press the **[ENTER]** key, and the system will automatically playback found image file and audio file in external storage device (SD/MMC, USB, CF) or internal memory. If no supported file found, "No Playable File" will be appears on the display then return to Main menu. To playback image file and audio files in different storage device, press **[HOME]** button in any mode then select **[Photo+Music]** in Main menu then press **[ENTER]** button to start playback if Auto-play is set to on. If file Manager appears, use navigation buttons **[◀▶]** to select decided device followed by **[ENTER]** button to start playback audio file.

 
8 Movie

After choosing **[Movie]** from the main menu, press the **ENTER** key, and the system will automatically playback found video file stored in external storage device (SD/MMC, USB, CF) or internal memory. If no supported file found, "No Playable File" will be appears on the display then return to Main menu. To playback audio in different storage device, press **HOME** button in any mode then select **[VIDEO]** in Main menu then press **ENTER** button, use **◀▶** to select decided device followed by **ENTER** button to start playback video file if auto-play is set to on. If File Manager appears, use navigation buttons to select decided file then press **ENTER** button to start.

Note:-


The photo frame can support audio files in DAT, MPG, VOB and AVI format.

This unit has been designed where possible to be compatible with most video formats. Due to the many varied video encoder available, we cannot guarantee that all formats are able to be playback.

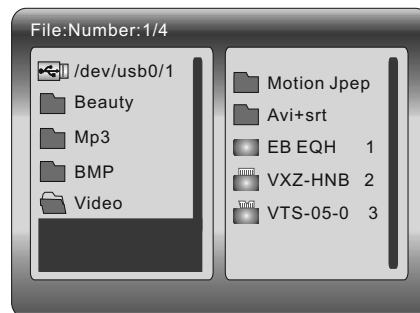

9 Calendar

 After selecting **[Calendar]** from the main menu, press the **ENTER** button, and you will enter the date setting mode.

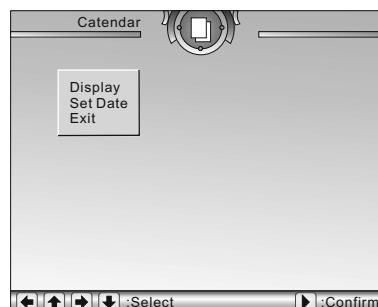


10

9 Calendar

9.1 Display

This option provides the **[Calendar]** display function. The date displayed in the calendar is the current date set in the system.



2008.4.7						
Sun	Mon	Tue	Wed	Thu	Fri	Sat
		1	2	3	4	5
6	7	8	9	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30			


In addition to displaying the current date, the user can use the **[▲]****[▼]** keys to browse different months, or use the **[◀]****[▶]** keys to browse different years.



2009.4.7						
Sun	Mon	Tue	Wed	Thu	Fri	Sat
		1	2	3	4	5
6	7	8	9	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30			

9.2 Set Date

 This function allows users to set the system date. Use **[◀]****[▶]** buttons to move between Year, Month and day. Use **[▲]****[▼]** buttons to set year, month and day. After the date is set, use **[◀]****[▶]** buttons to select OK then press **[ENTER]** button to confirm or select Cancel the press **[ENTER]** button to quit.

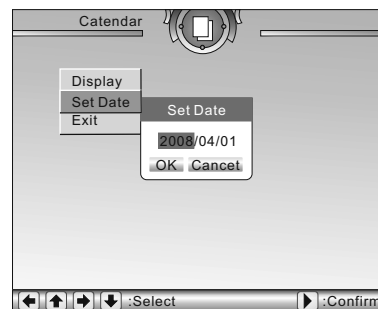


9.3 Exit

Exits date settings and goes back to the main menu.

10 Clock

 After selecting **[Clock]** from the main menu, press the **[ENTER]** key, and the system will enter time setting mode.

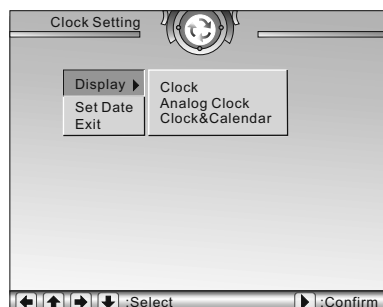



10.1 Display

This option allows the user to choose if they want to display **[Clock]** or **[Clock & Calendar]** or **[Analog Clock]**. Select **[Clock]**, and press the **[ENTER]** key.



10 Clock

  Select **[Analog Clock]**, and press the **ENTER** key. Select **[Clock & Calendar]**, and press the **ENTER** key.

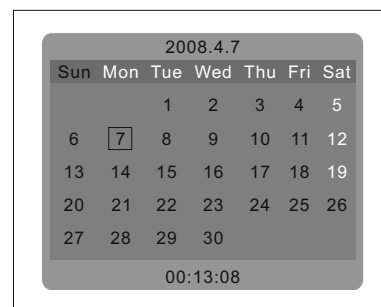
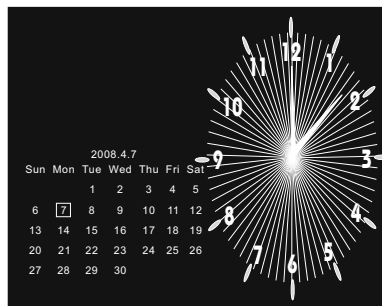


10.2 Set Time

This function allows the user to set the system time. Use **◀▶** buttons to move between Hour, Minute and second. Use **▲▼** buttons to set Hour, Minute and second. After the time is set, use **◀▶** buttons to select OK then press **ENTER** button to confirm or select Cancel then press **ENTER** button to quit.

10.3 Exit

  Exits the time settings, and goes back to the main menu.

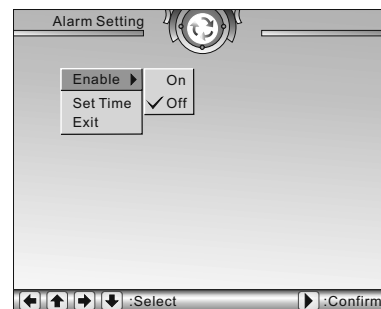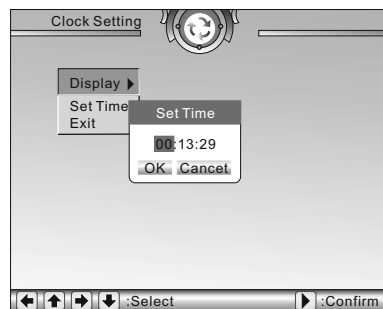

12

11 Alarm

After selecting **[Alarm]** from the main menu, press the **ENTER** button, and the system will enter the alarm settings mode.

11.1 Enable

This function allows users to activate(On) or de-activate(Off) the alarm.

11.2 Set Time

 
 
This function allows users to set the alarm time. When the alarm function has been activated, a prompt will appear.

Use **◀ ▶** buttons to move between Hour and Minute.

Use **▲ ▼** buttons to set Hour and Minute.

After the alarm time is set, use **◀ ▶** buttons to select OK then press **ENTER** button to confirm or select Cancel then press **ENTER** button to quit.

When the alarm sound, press any button to stop.

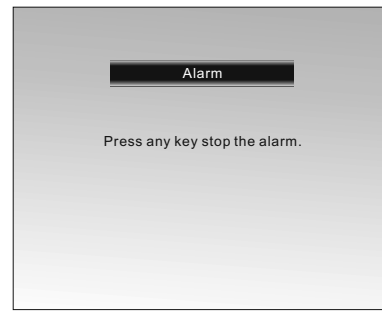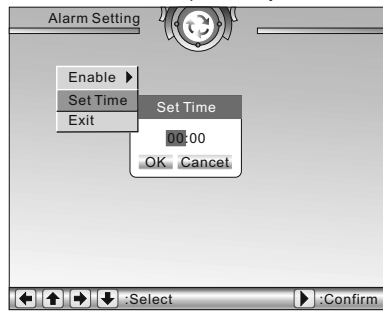

11.3 Exit

Exits the alarm settings, and goes back to the main menu.

12 Auto-Power

 
 
After selecting **[Auto-Power]** from the main menu, press the **ENTER** button, and the system will enter the automatic power-on/power-off settings mode.

12.1 Power On Enable

This option allows the user to either activate (On) or de-activate (Off) the automatic power-on function.

12.2 Power off Enable

This function allows the user to activate (On) or de-activate (Off) the automatic power-off function.

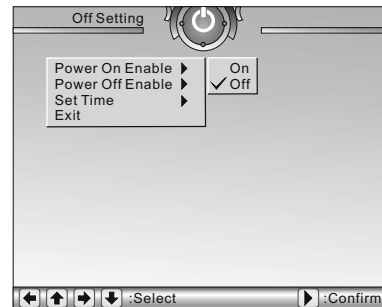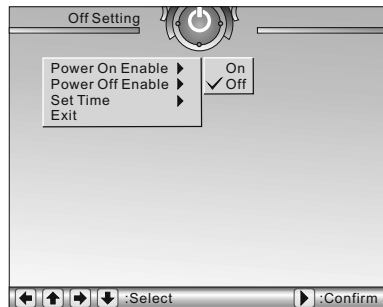

12 Auto-Power

12.3 Set Time

 
This function allows users to set the automatic power-on/power-off times. The user can choose to set the [Power-on] time or the [Power-off] time.

Use buttons to select Power On or Power Off then press button.

Use buttons to move between Hour and Minute.

Use buttons to set Hour and Minute.

After the Power On time or Power Off time is set, use buttons to select OK then press button to confirm or select Cancel then press button to quit.

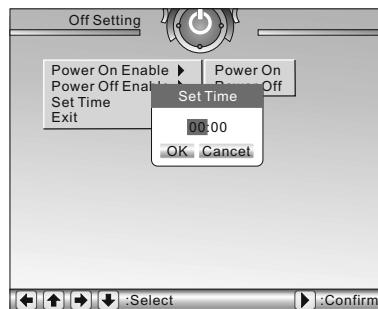

12.4 Exit

Exits the automatic power-on/power-off settings, and goes back to the main menu.

13 Edit

 
After selecting [Edit] from the main menu, press the button, and the system will enter Edit mode. In Edit mode, the user can choose Copy Photo • Music • Photo/Music • Movie.

13.1 Select Source

Use to jump to device list.

Use buttons to select device listed on the left then press button to the file/folder list.

Use buttons to select a file then press button to confirm or a folder then press button to enter this folder until decided file is selected. The selected file is enclosed by a yellow frame.

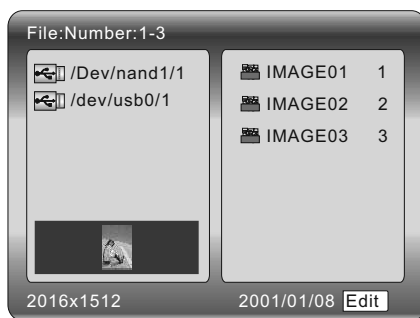

14

13 Edit

13.2 Copy

To copy a file, select the source file as described in page 14.

Press **▶** button to select Edit then press **ENTER** button.

 
Use **▲▼** buttons to select Copy then press **ENTER** button.

Use NAVIGATION buttons to select decided location/ folder then press **ENTER** button.

Use **◀** button to select Edit again then press **ENTER** button.

Use **▲▼** buttons to select Paste then press **ENTER** button to start copy.

After the file is copied, will return to File Manger.

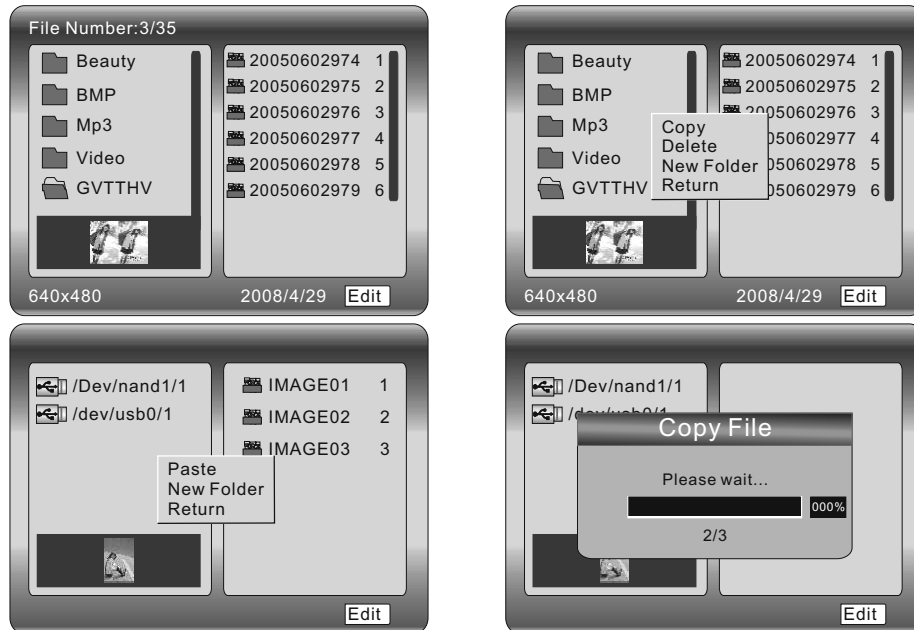


13.3 Delete

To delete a file, use NAVIGATION buttons to select decided file then press **ENTER** button.

Use **▶** button to select Edit then press **ENTER** button.

Use **▲▼** buttons to select Delete then press **ENTER** button.

 Use **◀▶** button to select Yes then press **ENTER** button to confirm or No to return to last stage.

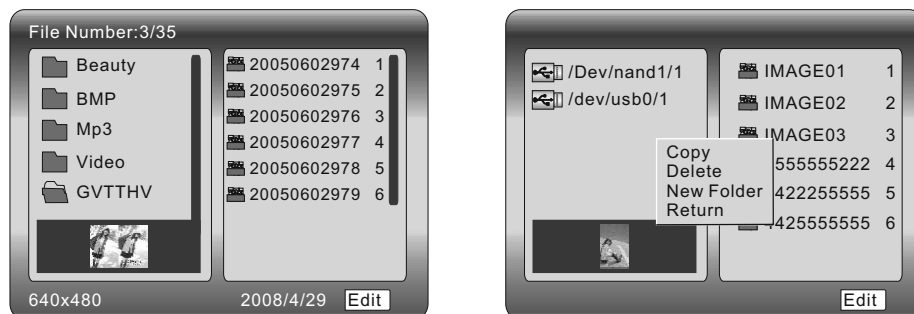


13 Edit



13.4 New Folder

This function allows users to create a new folder in the device you selected. To add a new folder, use NAVIGATION buttons to select decided location then press **ENTER** button. Use **◀▶** buttons to select Edit then press **ENTER** button. Use **▲▼** buttons to select New Folder then press **ENTER** button. Use on screen keyboard to enter folder name., Press **ENTER** button following to each selected character. Select the Enter then press **ENTER** button to complete.

Note: Should not use symbols • \ / : * ? < > | • for new folder name.

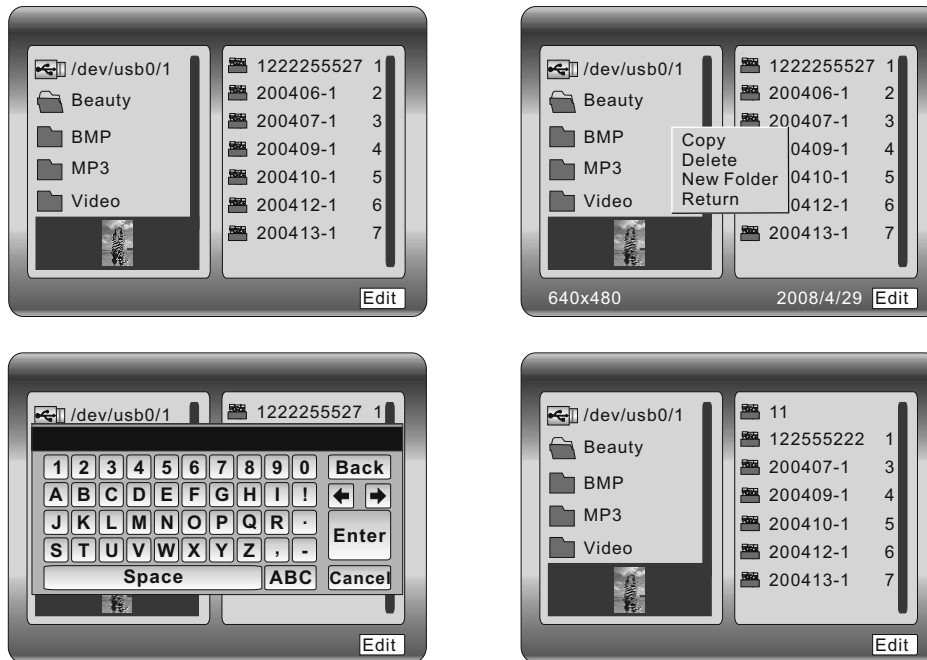 

13 Edit

 
 
13.5 Format PhotoFrame

This function allows users to format Nand.

In File Manager, use buttons to select Edit the press **ENTER** button.

Use buttons to select Format PhotoFrame then press **ENTER** button to start.

When format completed, will return to File Manager.

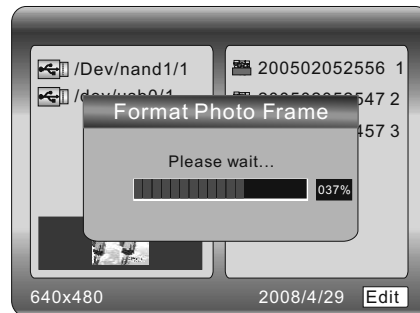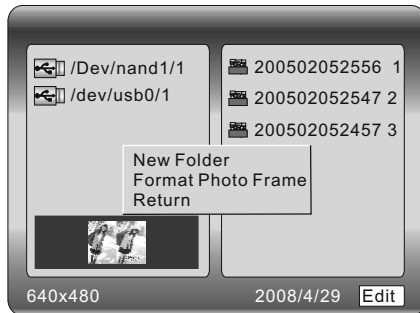

14 Ebook

After selecting **[EBook]**, press the **ENTER** button. Use buttons to select storage device then press **ENTER** button. Use NAVIGATION buttons to select decided file then press **ENTER** button to start. the text like doing it on PC.

15 Basic Operations

15.1 STANDBY: Turn on the photo frame or turn it to stand-by mode.

15.2 Function: main menu

Press **HOME** to directly enter the main menu. The user can then press the buttons to select the desired function. Press **ENTER** button to enter.



15 Basic Operations

15.3 Basic Playback Functions

STOP:

When the system is playing, pressing **STOP** will stop the playback. If you were displaying images, then you will enter Thumbnail mode or File Management mode; if you were playing a movie, then the movie will cease playing and you will enter the File Management mode.

PLAY/PAUSE:

If you wish to pause during playback, you can press **PLAY/PAUSE**.

If you are playing images, pressing **PLAY/PAUSE** will cause the images to stop playing.

Fast-forward play:

Press **▶▶** and the playback speed will increase to search forward. Speed settings: from x2 (double normal speed) all the way to x32 (32 times normal speed). Under x32, you can go back to normal playing speed by pressing **▶▶** once again.

Press **PLAY/PAUSE** under any speed and you will return to normal playing speed.

Note:-

This function not suitable for image file playback.

Fast rewind:

Press **◀◀** and the playback speed will increase and the system will search backwards. Speed settings: from x2 (double the original speed) to x32 (32 times the original speed). Under x32, you can go back to normal playing speed by pressing **◀◀** once again. Press **PLAY/PAUSE** under any speed and you will return to normal playing speed.

Note:-

This function not suitable for image file playback.

NEXT: Go to the next file.

During playback or when the system is stopped, press **▶▶** and the system will jump to the next file and play it.

PREV: Go to the previous file.

During playback or when the system is stopped, press **◀◀** and the system will jump back to the previous file and play it.

Repeat: Repetitive Playback

Press **REPEAT** once and the file that is currently playing will be repeated.

Press **REPEAT** for a second time and the folder that is currently playing will be repeated.

Press **REPEAT** for a third time and all the files in the storage device will be repeated.

Press **REPEAT** for a fourth time to exit the repeat mode.

DISPLAY: Information Display

DISPLAY provides you with information on the file that is currently playing. The background color will be set according to the interface style set by the user.

When you are playing JPG images:

The first time you press **DISPLAY**, the following information will be displayed: [menu \file name], [The order of this file inside the folder directory / the total number of files in this folder directory].

Note:-

This function not suitable for audio file playback.

15 Basic Operations



The second time you press **DISPLAY**, the following information will be displayed: [resolution], [date].



The third time you press **DISPLAY**, you will go back to the original display, and no information will be displayed.

When you are playing DAT/ MPG /VOB / MP4 videos:

The first time you press **DISPLAY**, the following information will be displayed: [menu \file name], [the order of this file inside the folder directory / the total number of files in this folder directory], and [Time]. However, after three seconds, the system will automatically display only the [Time].

When only the [Time] is displayed, press **DISPLAY** again to display the complete information.

The second time you press **DISPLAY**, you will go back to the original display, and no information will be displayed.

Zoom: Enlarge Images

When you are playing DAT/ MPG /VOB videos:

The first time you press **ZOOM**, the image will be enlarged 2X.

The second time you press **ZOOM**, the image will be enlarged 4X.

The third time you press **ZOOM**, the image will return to normal size.

When zooming in, you can use the direction buttons to select the zoom location.

When you are playing JPEG images:

The first time you press **ZOOM**, the image will be enlarged to 150%.

The second time you press **ZOOM**, the image will be enlarged to 200%.

The third time you press **ZOOM**, the image will be shrunk to 25%.

The fourth time you press **ZOOM**, the image will be shrunk to 50%.

The fifth time you press **ZOOM**, the image will be restored to normal size (100%).

When the image is enlarged, you can use the direction buttons to select the area on display.

Note:-

This function is not suitable for audio file playback.

VOL+/-: Volume: To increase/ decrease volume level.


Maximum 16, minimum 0


15 Basic Operations


MUTE:

Press **MUTE** once and the system will mute, press it again and sound will be restored.






Rotate JPG Images:

 
By pressing the  button on the remote control, you can rotate JPG images 90 degrees to the left (counter-clockwise).






By pressing the  button on the remote control, you can rotate the image 90 degrees to the right (clockwise).


By pressing the  button on the remote control, you can flip the image horizontally, reversing the left and right sides of the image.

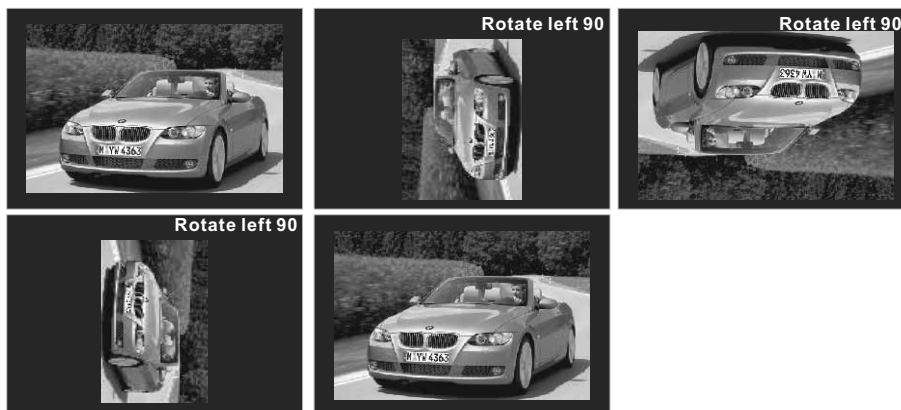By pressing the  button on the remote control, you can flip the image vertically, reversing the top and bottom sides of the image.


The left arrow button  on the remote control can be used to rotate a JPG image [90 degrees to the left (counter-clockwise)]. As shown in the sequential figures below, the front of the car is rotated counter-clockwise in the     directions.



 
The right arrow button  on the remote control can be used to rotate [90 degrees to the right (clockwise)]. As shown in the sequential figures below, the front of the car is rotated clockwise in the     directions.

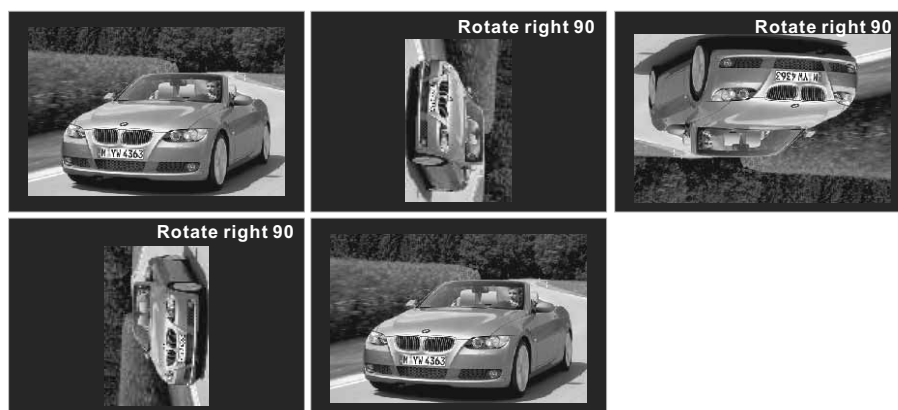


15 Basic Operations

The up button  on the remote control can be used to [flip horizontally], resulting in an image with left and right sides reversed. As shown in the figure below, the front of the car switches from left to right, and the entire image has been reversed from left to right, but the vertical sides do not change, the top of the car is still on top.



 The down button  on the remote control can be used to [shift vertically], resulting in an image that is reversed in terms of top and bottom sides. As shown in the figure below, the top of the car was originally on top, but ends up on the bottom. But the left and right sides of the car are not changed, the front of the car is still pointing towards the left.

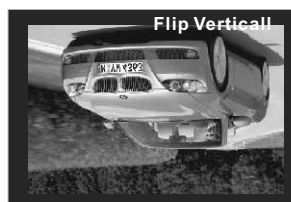

JPG Browse Mode:

When viewing images, press **STOP** and the system will enter the browse mode. After the system enters the [Thumbnail mode], fifteen 3x5 thumbnail clips will appear, making it easy for the user to view the images in the folder directory. After selecting the images that you wish to view, you can press **ENTER** to enter the Slide Show mode. After pressing **RETURN**, the user can select the Rotate function, and then select the image that they wish to rotate and then press **ENTER**. Rotate the selected image 90 degrees to the right. After the image has been rotated, you can press **RETURN** to return to the browse mode, or you can select the Reset function to cancel all rotation actions.

Media Manager:

When the user inserts a storage device such as a portable drive or SD card, after the system analyzes the file format, the user will be able to conduct playlist management through the File Manager. The recognizable multimedia file types include: JPEG, MP2, MP3, WMA, DAT, MPG, VOB, and MP4.

The window on the left of the File Manager is used to manage the folders inside the storage medium. The window on the right displays the files inside the particular folders.

Connecting to your PC:

Connecting the PhotoFrame to your PC

If your PC is running Windows XP or later version this photo frame does not require a driver. When it is connected to your PC it will appear as a mass storage device (Removable Disk).

The following procedure is an example based on a PC running Windows XP. It assumes that your PC is already powered on, the photo frame is in Main menu.

1. Select storage device you want to connect to PC in setup menu (Please refer to 4.3.4).
2. Using a USB cable (not supplied), connect the USB Mini B (smaller) end to the "PC" connector on the photo frame. Then connect the USB A (larger) end to your PC.
3. When connected successfully, "Connected to PC" will blanking on the display of the photo frame.
4. It is ready to transfer file in the same way as any removable disk.
5. Once the files have been transferred, wait for a few seconds before disconnecting your photo frame from your PC in the same way as any removable disk.

Warranty

Please keep your receipt as proof of purchase. This product is warranted for any defect in materials or workmanship for one year after the original date of purchase. This product is for normal domestic and office use only. This warranty does not cover damage from misuse or neglect, accidental damage, vermin infestation, excessive voltages such as lightning or power surges or any alternation that affects the performance or reliability of the product.

In the unlikely event that your product fails to work normally, please contact the **Bush Helpline 1800 509 394 (Australia) or 0800 450 259 (New Zealand)** and have your receipt of purchase on hand.

This guarantee is subject to the following provisions:

- It is only valid within boundaries of the country of purchase;
- The product must be correctly assembled and operated in Accordance with the instructions contained in the manual;
- This product must be used solely for domestic purposes;
- The guarantee does not cover accidental damage;
- The guarantee will be rendered invalid if the product is resold or has been damaged by inexpert repair;
- The manufacturer disclaims any liability for incidental or consequential damaged.

This guarantee is in addition to, and does not diminish, your statutory or legal rights.

PO BOX 6287
Silverwater NSW 1811
www.bushaustralia.com.au

Bush Helpline: 1800 509 394 Australia
Bush Helpline: 0800 450 259 New Zealand

ABUSH